


# Parts Reference Guide

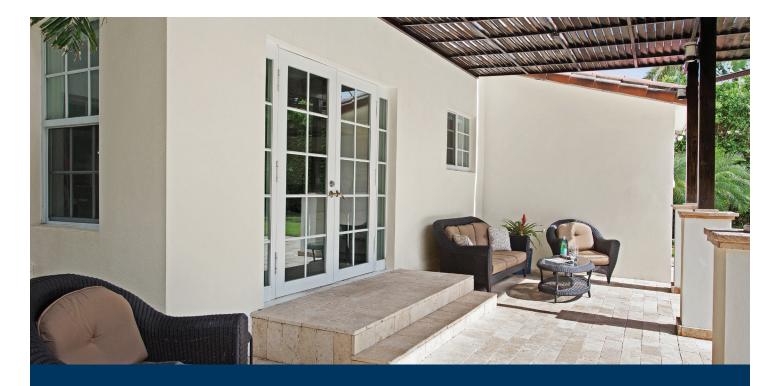





FD101 / FD101H

This reference guide is to help identify parts you may need.

Parts shown with weather-stripping may need weather-stripping ordered separately.

#### **FRAME PARTS**



Head (ordered by unit size or 12" sample)



Jamb (ordered by unit size or 12" sample)



Sidelite reinforcement (ordered by unit size or 12" sample)



1-1/2" bumper threshold (ordered by unit size or 12" sample)



In-swing threshold (ordered by unit size or 12" sample)



Low-rise bumper threshold (ordered by unit size or 12" sample)




Threshold installation screw cover (ordered by actual cut size or unit size)



 $\begin{array}{l} \textbf{Drip cap} \\ \textit{(ordered by actual cut size or unit size)} \end{array}$ 



Jamb plug

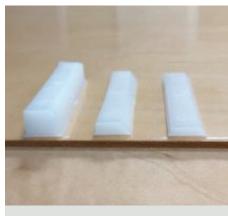

Adjuster insert-large, medium, small



Low-rise bumper threshold cup & screws



Hinge



Strike plate insert



Deadbolt & handle strike plate



2-point/inactive flushbolt header strike plate



Frame head strike plate backing plate



Frame head & jamb weather-strip (inner)



Frame head & jamb weather-strip (outer)



Threshold weather-strip

## **SLAB PARTS**



Stile – hinge side (ordered by unit size or 12" sample)



Top & bottom rail (ordered by unit size or 12" sample)



Stile – active astragal (ordered by unit size or 12" sample)



Stile – inactive astragal (ordered by unit size or 12" sample)



Top/bottom sweep w/weather-strip (ordered by unit size or 12" sample)



Top/bottom sweep weather-strip



2-point lock thumb turn assembly



2-point lock assembly (ordered by unit size)



2-point lock guide assembly



Inactive flushbolt



Double door inactive astragal end seal



Inactive astragal end seal weather-strip



Inactive slab dust plug



Lock support assembly



XX kit

## SIDELITE PARTS



 $\label{eq:Adapter} A dapter \\ \textit{(ordered by actual cut size or unit size)}$ 

#### FRENCH DOOR EXPLODED VIEW

